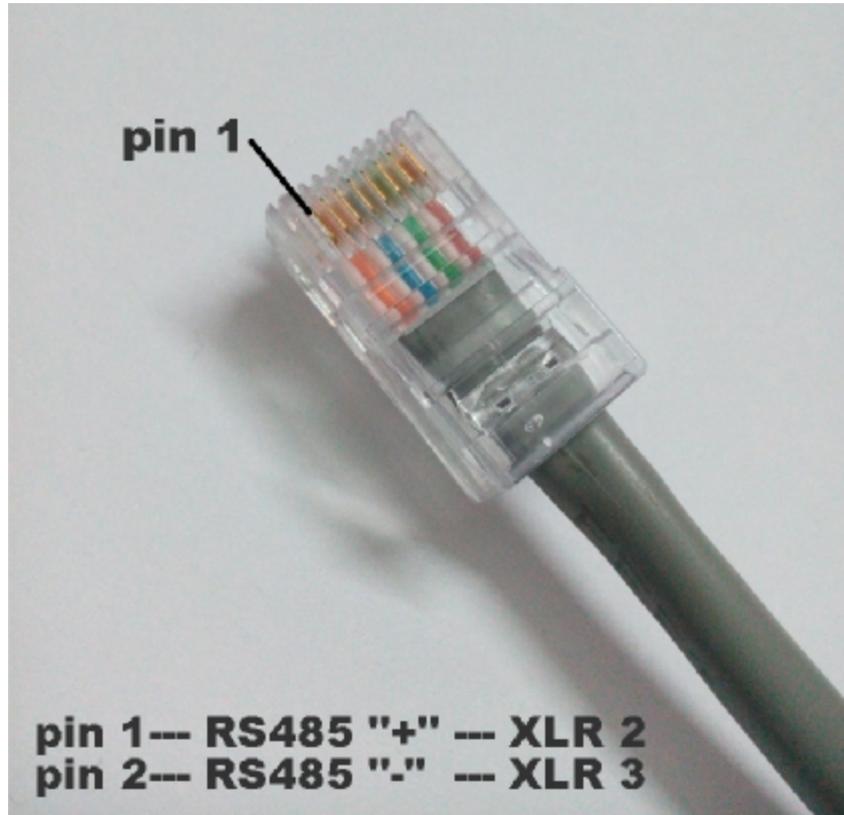# XLR to RJ45

pin 1--- RS485 "+" --- XLR 2
pin 2--- RS485 "-" --- XLR 3

If you have question, Contact us.